

The audible alerts consist of a sequence of long and short beeps, repeating every five seconds. To determine the cause of the alert, record ● for short beeps and — for long beeps, then match the code you heard to this list.



AUDIBLE ALERT REFERENCE	
● ●	Start Fail
● —	Low Voltage Cutoff
— ●	Over-Current
● ● ●	Sensors Lost
● ● —	Radio Glitch
● — ●	Over-Temperature
● — —	Excessive Load
— ● ●	FLUX Wire Radio Glitch
— — ●	Motor Over-Temperature

castle *OVERPOWERING RC SINCE 1997*