LONG ARM LIFT KIT ASSEMBLY INSTRUCTIONS

AD

Introduction

Thank you for purchasing the Traxxas TRX-4 Long Arm Lift Kit for added ground clearance and capability. This kit includes everything you need to properly install a massive lift under your TRX-4 including long-arm links, longer aluminum shocks, taller springs, extended driveshafts, and a revised front servo mount to maintain proper steering geometry. If you have any questions or concerns about installing your kit, please contact our customer support team for fast, friendly answers and solutions.

KIT CONTENTS

- Front Servo Mount
- Battery Plate Spacer (2)
- 3x20 BCS (4)
- Differential T-Lock Cables (168.9mm Front and 207.9mm Rear)
- Long Aluminum GTS Shocks (4)
- Shock Springs (4)
- Silicone Shock Oil
- Front Upper Suspension Link (assembled with angled rod ends and hollow balls)
- Front Lower Suspension Link (assembled with standard rod ends and hollow balls) (2)
- Rear Upper Suspension Links (assembled with angled rod ends and hollow balls) (2)
- Rear Lower Suspension Links (assembled with standard rod ends and hollow balls) (2)

- Standard Extended Rod Ends (assembled with hollow balls) (4) (for 324mm wheelbase)
- Angled Extended Rod Ends (assembled with hollow balls) (4) (for 324mm wheelbase)
- Short Female Half Shaft
- Medium Female Half Shaft (2)
- Long Female Half Shaft
- X-Long Female Half Shaft (2)
- 10-T Pinion Gear
- 3x3mm Set Screw
- Spare E-clips (2)

Note: Unless otherwise noted, retain and reuse any hardware and parts from your model that are not included with this kit.

Introduction

ITEMS YOU WILL NEED

- Hex driver
- Small flat blade screwdriver
- 4-way wrench

- Needle nose pliers
- Safety glasses

These items can be purchased from your hobby dealer.

 
If you have any questions, call the Traxxas Technical Support Line toll-free at:

1-888-TRAXXAS (1-888-872-9927)*

Technical support is available Monday through Friday from 8:30am to 9:00pm central time. Technical assistance is also available at Traxxas.com. You may also e-mail customer support with your question at support@Traxxas.com.

HARDWARE DESCRIPTIONS

The following chart is provided to help you identify the many different sizes and types of hardware that are used in the assembly of this lift kit. Note the difference between the length measurements of the roundhead and countersunk screws. A ruler is provided at the bottom of each page to measure the length of the screws in millimeters.




0	ccs	Coun	itersu	nk Ca	p Scre	w			GS		Set (Grub) Screw
0	CS	Cap S	Screw					C	Е		E-Clip
S	FCS	Flath	ead C	ap Sc	rew				BCS	S	Buttonhead Cap Screw
*Toll-free support is available to U.S. residents only.											
	0	10 2	20	30	40	50	60	70	80	90	100

1 m

Suspension Link Guide


See the illustrations below for correct suspension link measurements for your model's wheelbase.

SHORT WHEELBASE 312mm (12.3") (Traxxas Models 82046-4, 82016-4)

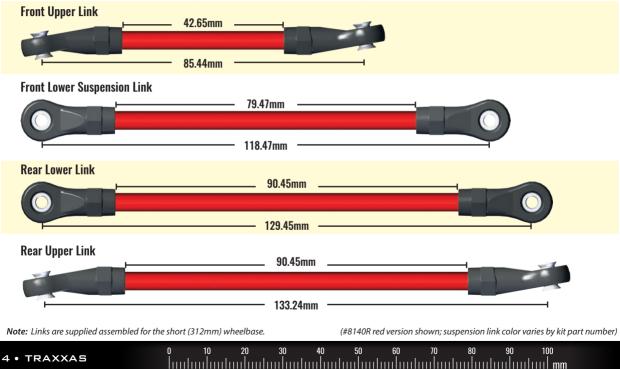


Suspension Link Guide


LONG WHEELBASE 324mm (12.7") (Traxxas Models 82056-4, 82066-4)

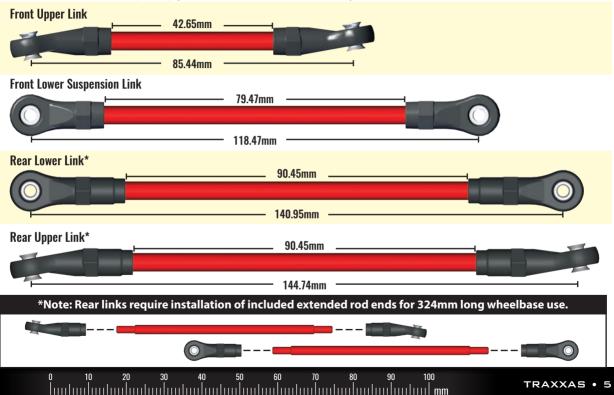

A. Assemble GTS Shocks

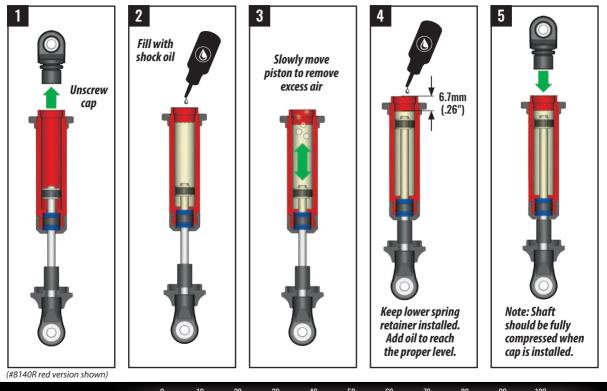


A. Assemble GTS Shocks

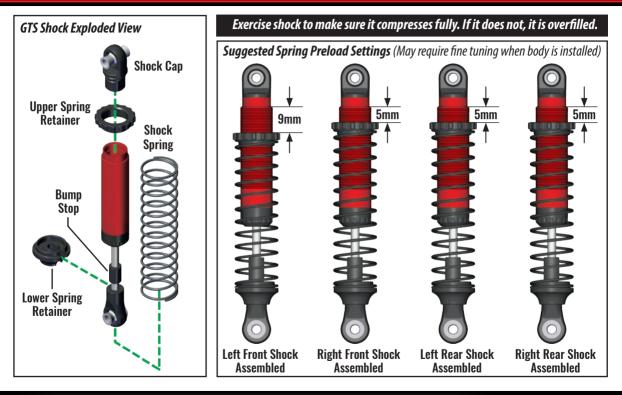


and 1 mm

B. Remove the front and rear center driveshaft assembly

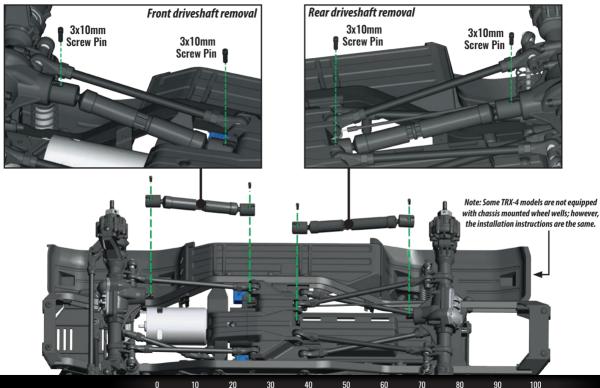


8 • TRAXXAS

C. Remove the T-Lock cables from the shift servos

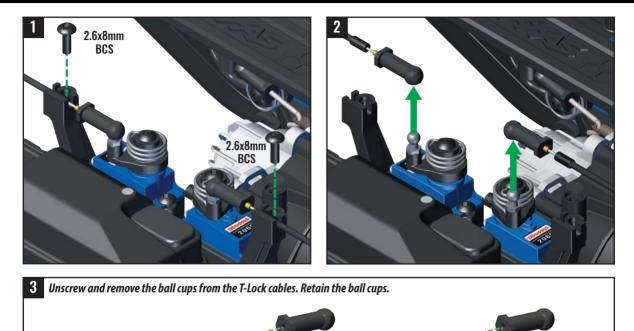


D. Remove the rear axle assembly from the chassis

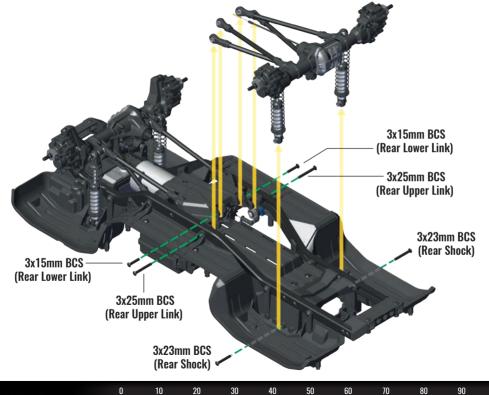


10 • TRAXXAS

E. Remove the shocks and rear suspension links from the axle assembly

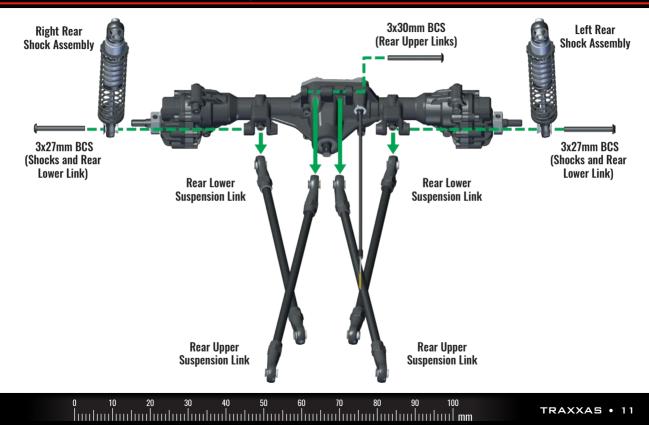


F. Remove the front axle assembly from the chassis

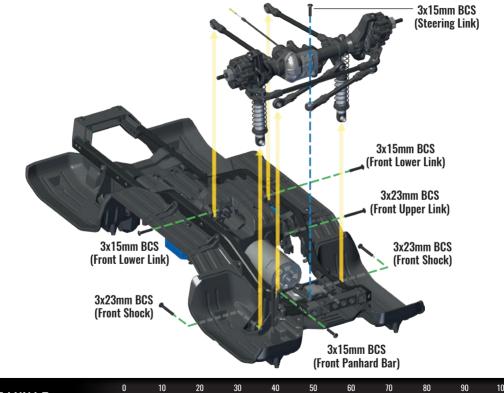

12 • TRAXXAS


G. Remove the shocks and front suspension links from the axle assembly

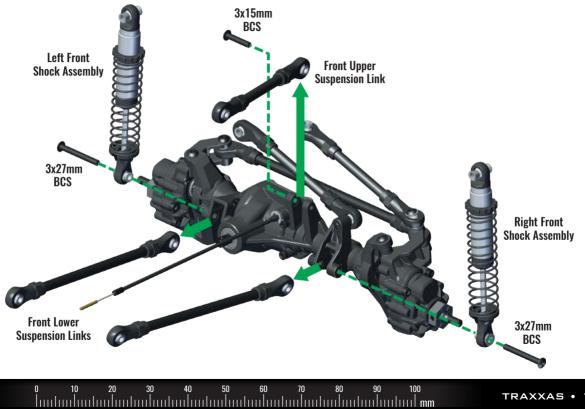

TRAXXAS • 13


H. Remove the differential cover from the front and rear axle assemblies

Rear Axle Assembly shown. Repeat for Front Axle Assembly.

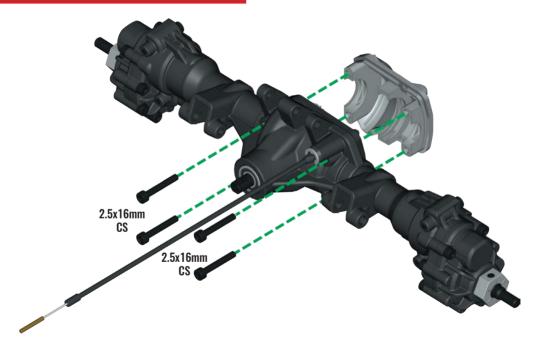


14 • TRAXXAS

I. Remove the locking fork from the locking slider

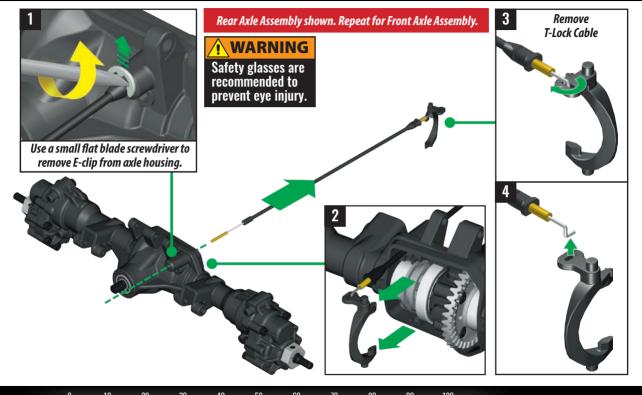


J. Install the new T-Lock cable in the axle assemblies

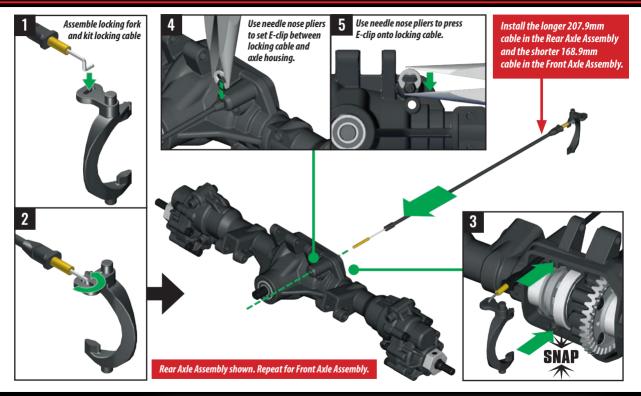


16 • TRAXXAS


K. Install the differential cover on the axle assemblies

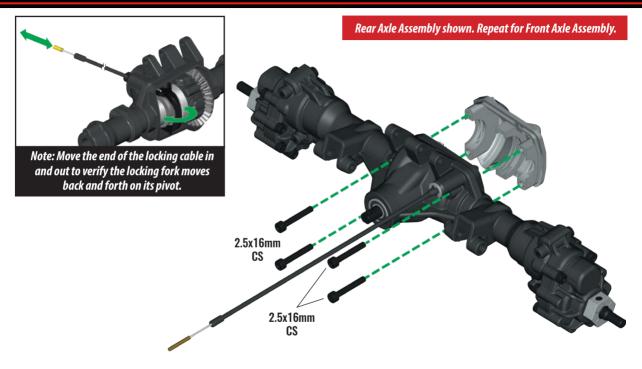

L. Install the new lift kit suspension links and GTS shocks on the rear axle assembly

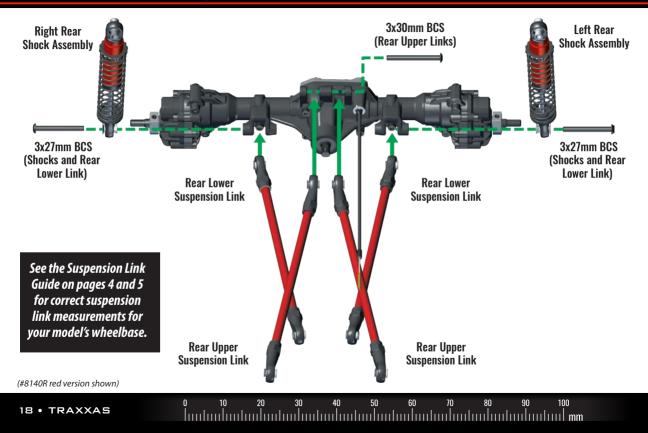


M. Install the new lift kit suspension links and GTS shocks on the front axle assembly

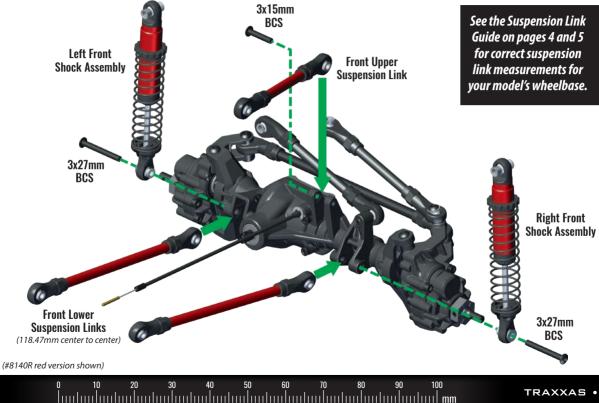


TRAXXAS • 19

N. Remove the battery plate and existing steering servo mount.

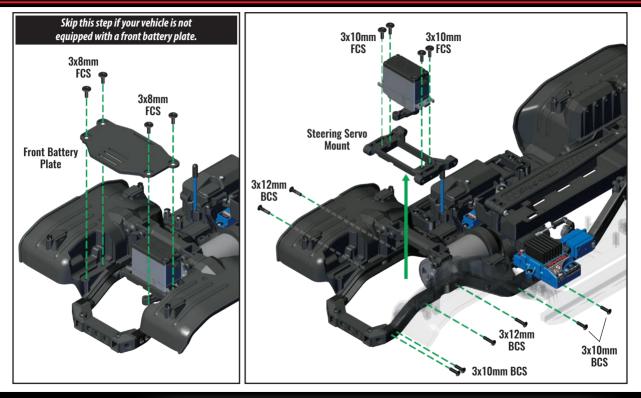


20 • TRAXXAS

O. Install new lift kit steering servo mount and battery plate spacers

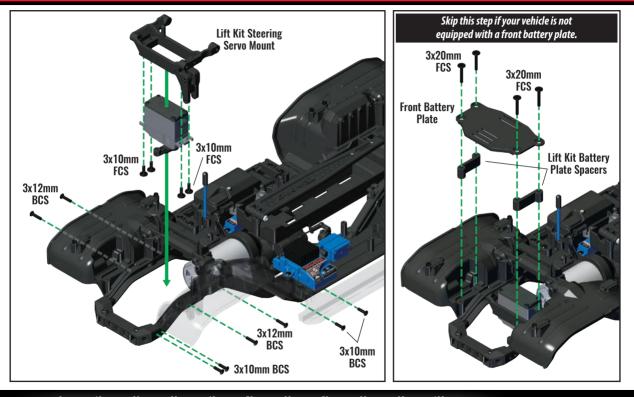


P. Reattach front axle assembly to chassis

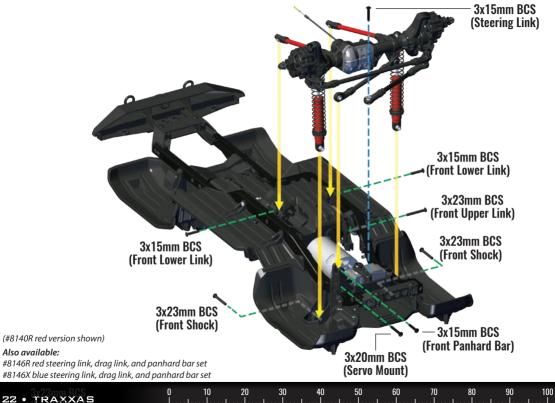


հայիսվավարիականականությունությունությունությունությունությունությունությունությունությունությունությունություն

P. Reattach front axle assembly to chassis

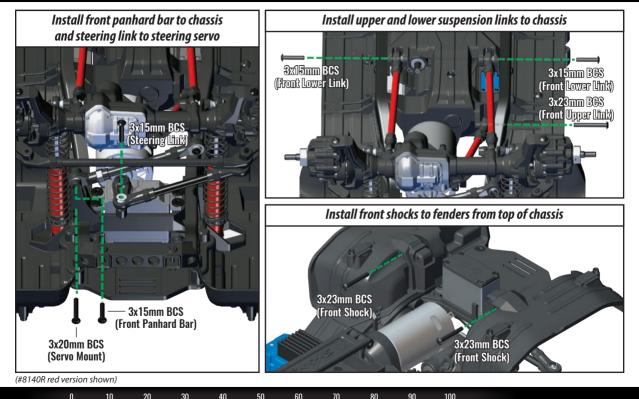


Q. Reattach rear axle assembly to chassis

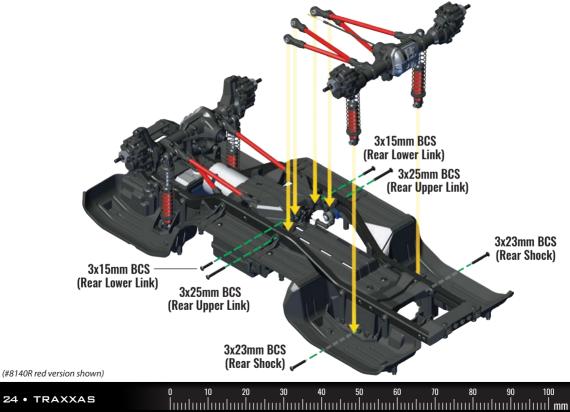


24 • TRAXXAS

Q. Reattach rear axle assembly to chassis

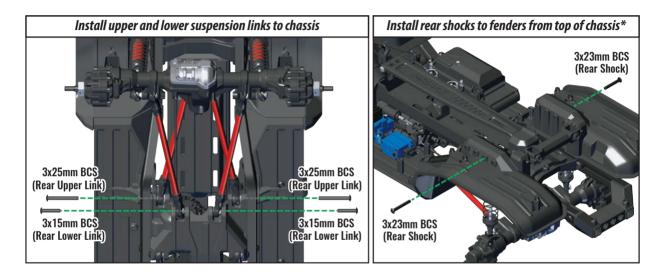




R. Reconnect T-Lock cables to shift servos

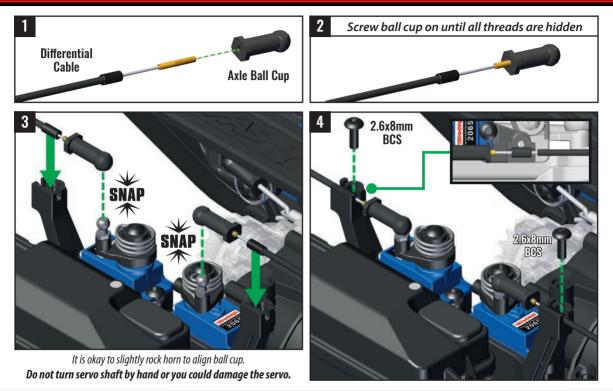


26 • TRAXXAS


S. Remove stock half shafts and assemble new driveshafts

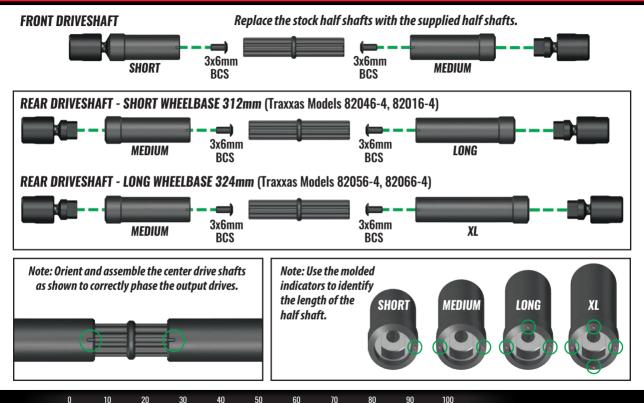

T. Install new front and rear center driveshaft assemblies

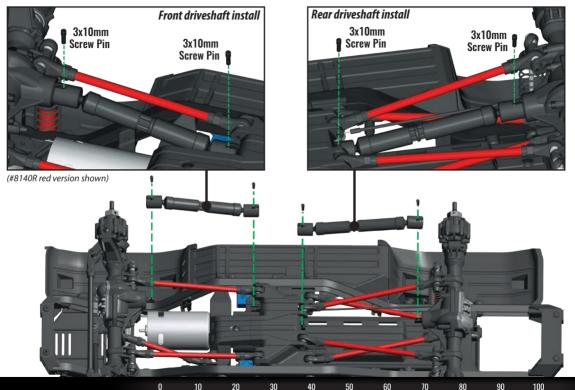

U. Remove 11-T pinion gear and install new 10-T pinion gear on motor shaft

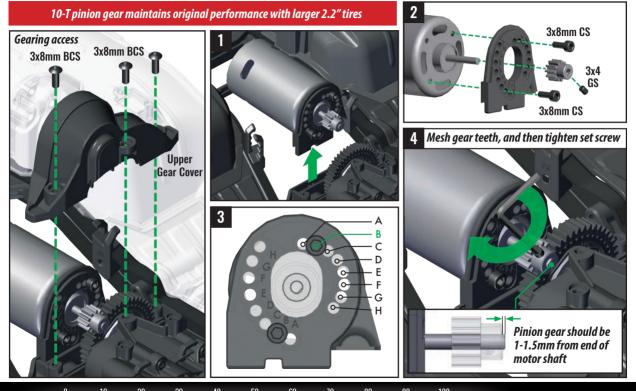

Notes	
30 • TRAXXAS	0 10 20 30 40 50 60 70 80 90 100

0 10 20 30 40 50 60 70 80 90 100	TRAXXAS • 31

PART #8140, 8140R, 8140X

6250 TRAXXAS WAY, MCKINNEY, TEXAS 75070 1-888-TRAXXAS

AD

180427 KC2561-R00