

NO DRY GRASS

OR WEEDS

TAKE THE KEY OUT OF THE CONTROLLER. WAIT ONE MINUTE BEFORE GOING NEAR THE ROCKET! Disconnect the igniter clips and remove the engine. Take the plug and igniter out of the engine. If the igniter

has burned, it worked but did not ignite the engine because it was not touching the propellant inside the engine. Put a new igniter all the way inside the engine without bending it. Push the plug in place. Repeat the steps under Countdown and Launch.

www.estesrockets.com

DIPIONAL SE

0803


ESTES INDUSTRIES 1295 H Street Penrose, CO 81240 PRINTED IN CHINA

ASSEMBLY TIP: Read all instructions before beginning work on your model. Make sure you have all parts and supplies.

TEST-FIT ALL PARTS TOGETHER BEFORE APPLYING ANY GLUE!

If any parts don't fit properly, sand as required for precision assembly.



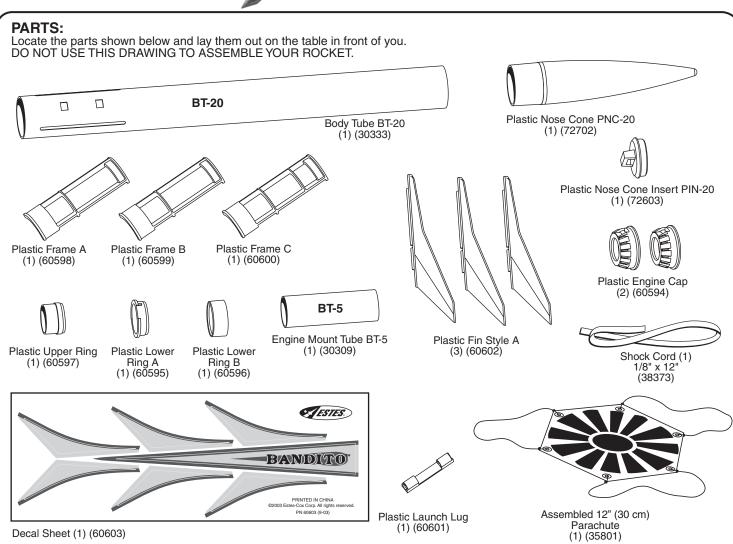



In addition to the parts included in the kit you will also need:







