


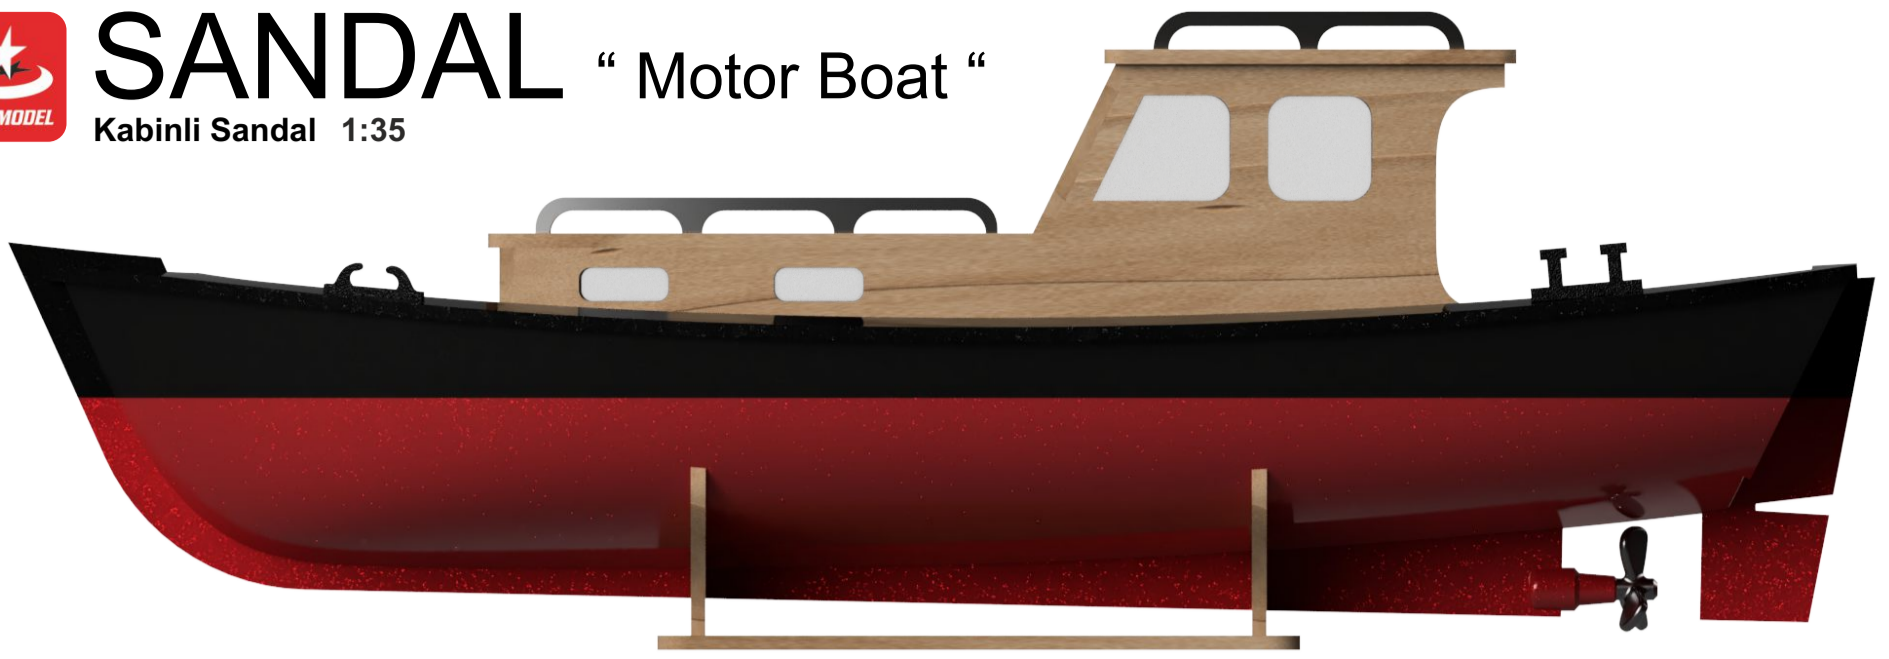


SANDAL "Motor Boat"

Kabinli Sandal 1:35



SANDAL "Motor Boat"

Kabinli Sandal 1:35

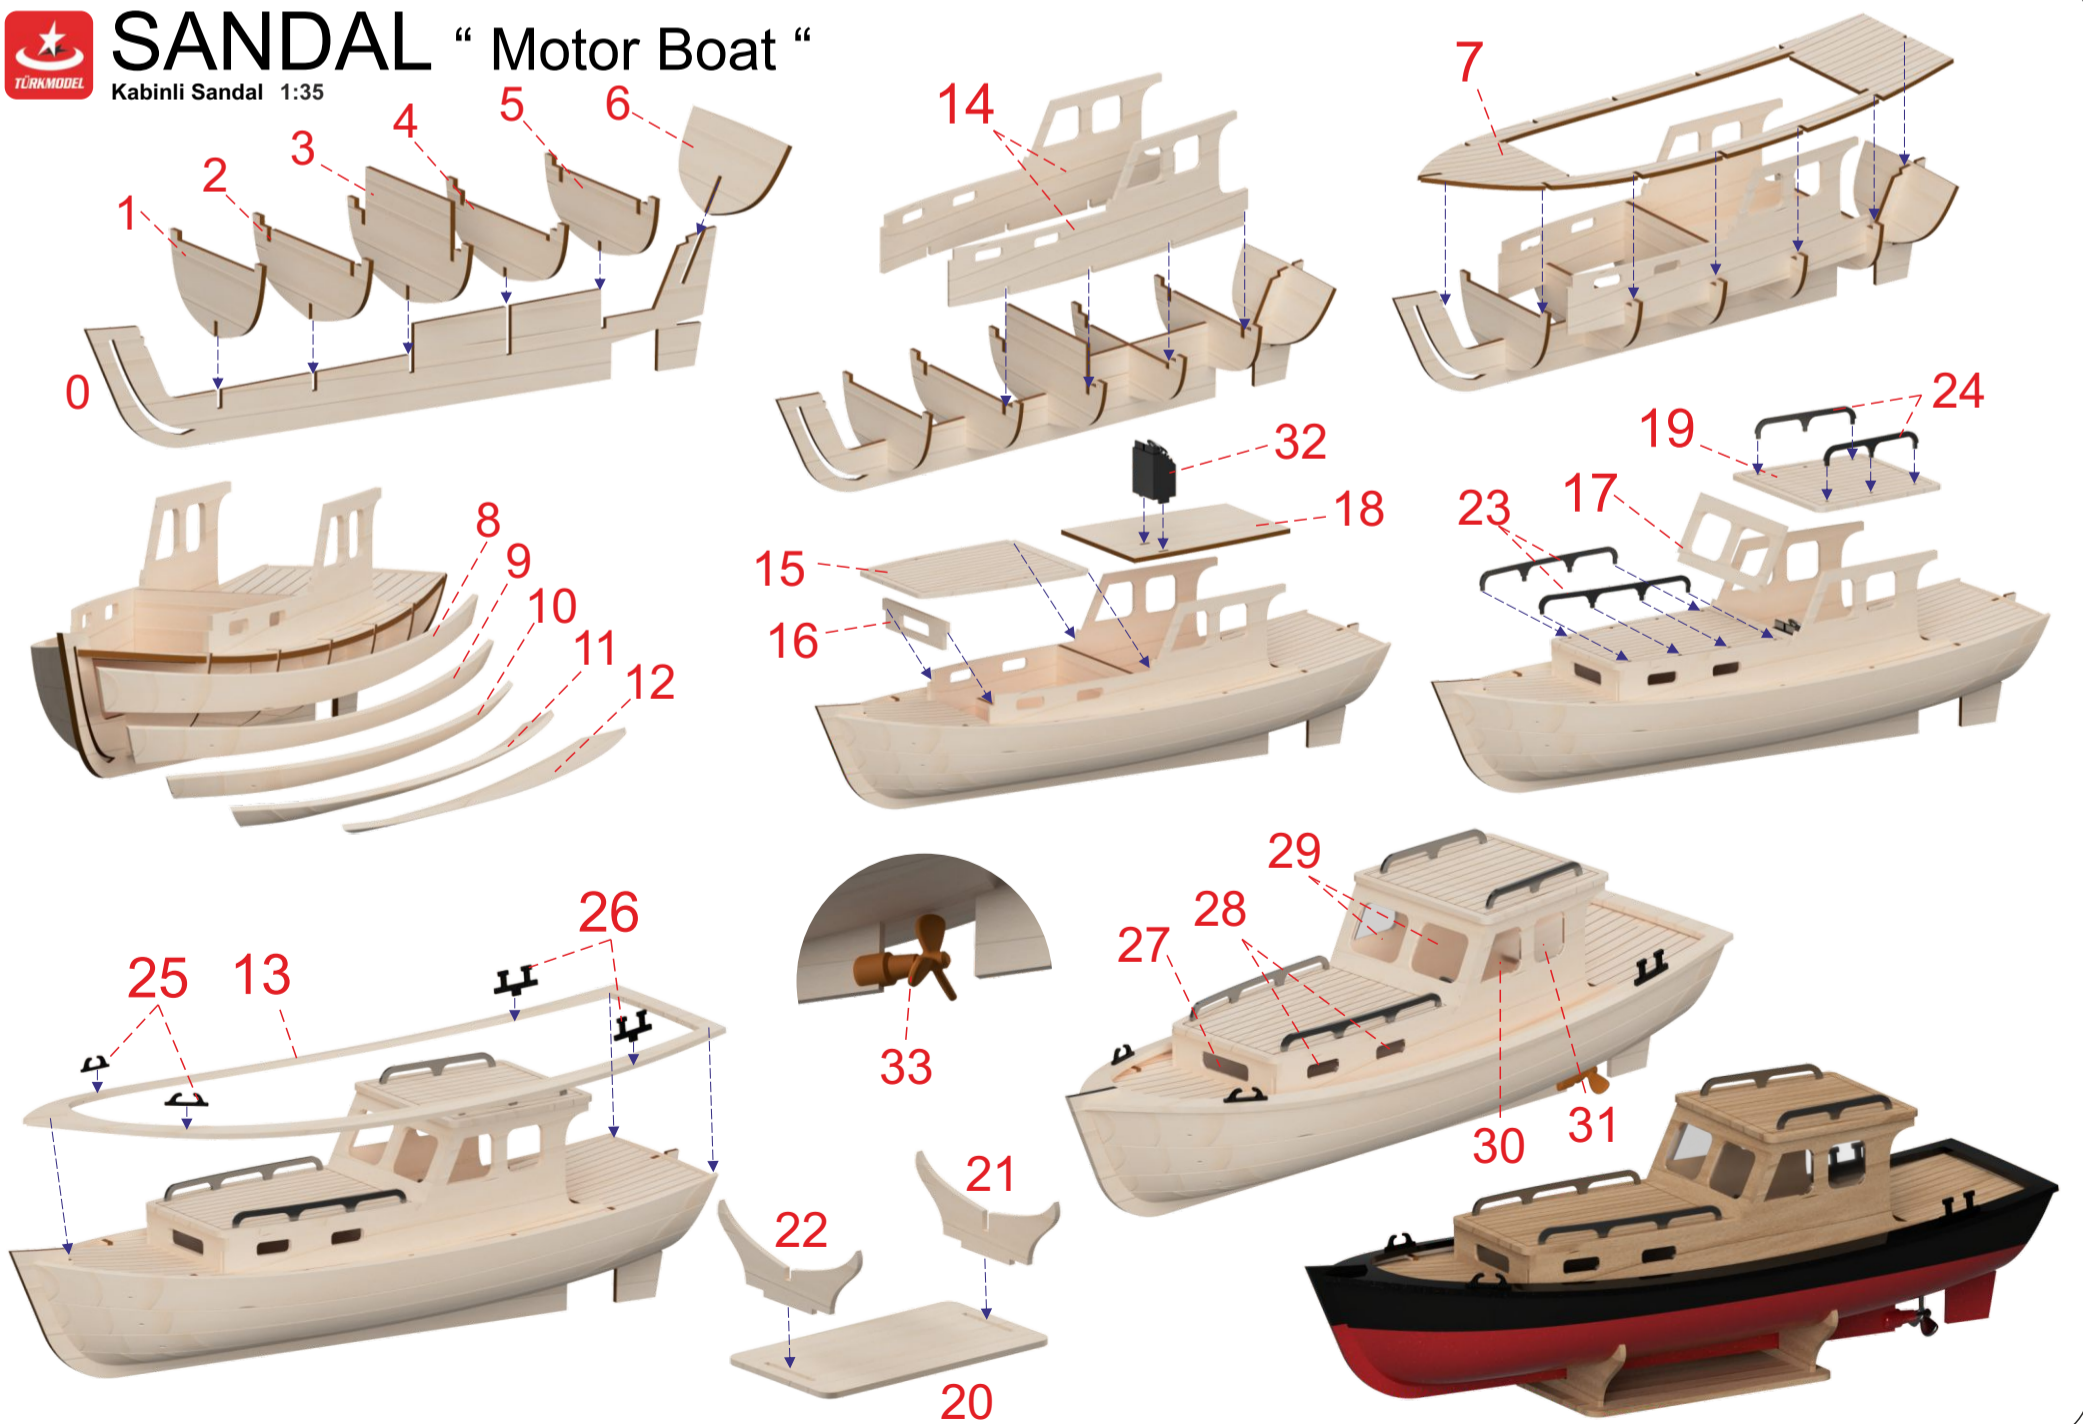

KABİNLİ SANDAL PARÇA LİSTESİ

1,5mm Kontraplak

0	1	Omurga	1,5mm	Kontraplak
1...6	6	Postalar	1,5mm	Kontraplak
7	1	Güverte	1,5mm	Kontraplak
8...12	10	Gövde panelleri	1,5mm	Kontraplak
13	1	Küpeşte	1,5mm	Kontraplak
14	2	Kabin yan duvarları	1,5mm	Kontraplak
15	1	Kamara üst duvarı	1,5mm	Kontraplak
16	1	Kamara ön duvarı	1,5mm	Kontraplak
17	1	Kabin ön duvarı	1,5mm	Kontraplak
18	1	Kabin zemin	1,5mm	Kontraplak
19	1	Kabin üst duvarı	1,5mm	Kontraplak
20-21-22	3	Kaide parçaları	1,5mm	Kontraplak

0,75mm Pvc

23	2	Kamara üst küpeşte	0,75mm	PVC
24	2	Kabin üst küpeşte	0,75mm	PVC
25	2	Kurtağzı	0,75mm	PVC
26	2	İkili baba	0,75mm	PVC
27	1	Kamara ön cam	0,75mm	PVC
28	4	Kamara yan camlar	0,75mm	PVC
29	2	Kabin ön camlar	0,75mm	PVC
30	2	Kabin yan camlar	0,75mm	PVC
31	2	Kabin yan camlar	0,75mm	PVC

3B Reçine

32	1	Kontrol paneli	-	3b Reçine
33	1	Pervane	-	3b Reçine

Motor Boat Part List

1,5 mm Plywood

0	1	Keel	1,5 mm	Plywood
1...6	6	Frames	1,5 mm	Plywood
7	1	Deck	1,5 mm	Plywood
8...12	10	Hull Panels	1,5 mm	Plywood
13	1	Rail	1,5 mm	Plywood
14	2	Cabine Side Walls	1,5 mm	Plywood
15	1	Cabine Upper Wall	1,5 mm	Plywood
16	1	Cabine Front Wall	1,5 mm	Plywood
17	1	Cabine Front Wall	1,5 mm	Plywood
18	1	Canine Floor	1,5 mm	Plywood
19	1	Cabine Upper Wall	1,5 mm	Plywood
20-21-22	3	Base Parts	1,5 mm	Plywood

0,75 mm Pvc

23	2	Cabine Upper Rail	0,75 mm	PVC
24	2	Cabine Upper Rail	0,75 mm	PVC
25	2	Dovetail	0,75 mm	PVC
26	2	Double-Head Bollards	0,75 mm	PVC
27	1	Cabine Front Glass	0,75 mm	PVC
28	4	Cabine Side Glasses	0,75 mm	PVC
29	2	Cabine Front Glasses	0,75 mm	PVC
30	2	Cabine Side Glasses	0,75 mm	PVC
31	2	Cabine Side Glasses	0,75 mm	PVC

3B Resin

32	1	Control Panel	-	3B Resin
33	1	Propellar	-	3B Resin

ASISTANT GUIDE

- ❖ Please read the instructions carefully before you start to build your model. Take notes if needed. So, you may find out the materials and the tools those you need.
- ❖ Use model knife to take out the parts the plywood sheets. Do not take them out with hand!
- ❖ Change of temperature effects on plywoods quickly. So that, do not release the plywoods. Keep them on a flat surface by putting weight on them.
- ❖ You may stick together the wooden parts easily if you sand the brown areas caused by laser with sand paper.
- ❖ You should use super glue and white glue to stick together the wooden parts and use the super glue for metal parts.
- ❖ Building the keel of your model, before stick the frames, be sure the frames properly seated on the keel. Otherwise you can't build the body of the model rightly. Exactly be sure that left and right side of the frames are compatible and symmetrical.
- ❖ After building the keel of your model, before the covering, you should test the frame edges by a cover strip. You should sand with a piece of sandpaper the frame edges at the right degree to touch the strips on to the surface exactly. The curves are mostly the front and back side of the body.
- ❖ You should keep the strip tips in the bowl filled with water approximately one hour. So that you may curve the strips on the curves easily these are mostly at the end and the front of the hull.
- ❖ You should cover the strip starting from the top for each side symmetrically.
- ❖ You should cut the upper side of the strip when overlap occurs especially at the front curve of the body.
- ❖ To make equal the surface of the body that caused by planking, you should sand with a piece of sandpaper (Firstly you should use thick sandpaper, then you can apply thin sandpaper), . You should fill the gaps after this processing. You may use leftover strips for wide gaps and model putty for small gaps.
- ❖ If you don't want to appear wooden tissue of the body of your model body; first, apply filler undercoat then sand with a thin sandpaper to make it ready to apply putty. Apply putty whole body and sandpaper again. Apply one more coat filler undercoat and sandpaper. You should not use very thick sandpaper to sand the putty and filler undercoat. You should repeat this process until you get the results as you want. You should apply undercoat paint to find out if any mistake appears at the body. The body gets ready for painting after these applications. You may use model brushes for filler coating. In order to understand whether the materials (such paint, filler, undercoat, varnish, etc.) are compatible with each other, you should test on the unnecessary parts.
- ❖ Some of the model's logo, name or the number are produced from decal paper. You should keep them in a bowl filled with warm water for two or three minutes. You should apply them to their places while releasing from their paper. You may attach easily If you apply gloss varnish to the place before applying the decals. You may apply matt, gloss or satin varnish after this application preferably.
- ❖ You should keep your model away from direct sunlight, heat and moist to avoid deformation in the course of time.

YARDIMCI KILAVUZ



- ❖ Maketinizin yapımına başlamadan önce planı ve plandaki yazıları dikkatlice gözden geçiriniz. Gerekli gördüğünüz yerlere notlar alınız. İhtiyacınız olan yardımcı malzeme ve aletleri de bu şekilde tespit edebilirsiniz.
- ❖ Kontraplak üzerindeki parçaları çıkartmak için mutlaka maket bıçağı kullanınız, el ile kopartmayınız!
- ❖ Kontraplaklar hava ısı ve neme karşı çok çabuk reaksiyon gösterirler. Bu yüzden modelin yapımı sırasında kontraplak parçaları serbest durumda bırakmayınız. Üzerine ağırlık koyarak düz bir satih üzerinde muhafaza ediniz.
- ❖ Maketin üretiminde kullanılan lazer kesimden kaynaklanan, ahşap üzerindeki kahverengi kısımları zımpara ile temizlerseniz daha iyi yapışmasını sağlarsınız.
- ❖ Ahşap parçaları yapıştırmak için beyaz ağaç tutkalı ve hızlı yapıştırıcı, metal parçalar için de hızlı yapıştırıcı kullanabilirsiniz.
- ❖ Maketin iskeletini oluştururken postaların omurga üzerine tam ve doğru bir biçimde oturduğundan emin olmadan yapıştırmayınız. Aksi halde gövdeyi düzgün bir şekilde oluşturamazsınız. Postaların birbirleri ile uyumlu bir şekilde sağ ve sol taraflarının simetrik olarak oturduğundan kesinlikle emin olunuz.
- ❖ Omurga iskeletini oluşturduktan sonra, çita sarma işlemine geçmeden önce, posta kenarlarını bir sarma çitası ile prova edip, sarma çitasının özellikle maketin kavis alan ön ve arka kısımlarına doğru posta kenarlarının yüzeyine tam olarak temas etmesini sağlamak için uygun açıda zımparalayınız.
- ❖ Maketin gövde kısmını oluşturmak için çitaları postalar üzerine sarma işlemine başlamadan önce çitaları su dolu bir kapta bir saat kadar tutunuz. Böylelikle sarma işlemi yaparken uç kısımlara doğru artan kavisleri rahatlıkla dönebilirsiniz.
- ❖ Sarma çitalarını her defasında sağ ve sol taraftan birer kez simetrik olarak üstten başlayarak sarınız. Sarma çitaları özellikle ön kısımda birbirlerinin üzerine binmeye başladıklarında üst kısımlarından tıraşlayarak inceltiniz.
- ❖ Sarma işlemini bittikten sonra öncelikle kalın ve ince zımpara ile yüzeyini çitalardan kaynaklı taşmaları düzeltmek için zımparalayınız. Bu işlemden sonra, gövdede oluşan boşluklar var ise; büyük boşlukları atık çitalara şekil vererek, daha küçük boşlukları da dolgu malzemeleri ile kapatınız.
- ❖ Maketin gövdesinde ahşap doku izleri görünmemesi gerekiyorsa; önce dolgu astarı ardından ince bir zımpara ile zımparalayarak gövdenin tamamını macun çekmeye hazır hale getiriniz ve gövdeye macun çekip tekrar zımparalayınız. Üzerine bir kat daha dolgu astarı atarak tekrar zımparalayınız. Dolgu astarı ve macunu zımparalarken çok kalın zımpara kullanmayınız. Gövde istediğiniz gibi olana kadar bu işlemleri tekrarlayınız. Kusur olup olmadığını anlamak için en son olarak astar boya atınız. Ondandan sonra gövde boyanmaya hazır hale gelmiştir. Dolgu astarını fırça ile atabilirsiniz. Kullanacağınız kimyasal içeren maddelerin (boya, vernik, dolgu macunu, astar boya, vs. gibi) birbiri ile uyuşup uyuşmadığını anlamak için ayrı bir yerde deneme yapınız.
- ❖ Modellerin üzerindeki logo, isim ya da numaraların bazıları suda çözünen çıkartmalardan üretilmektedir. Bunları çok küçük bir kabın içindeki ılık suda iki-üç dakika bekleterek kağıtlarından ayrılmasını sağlayıp dikkatli bir biçimde uygulanacağı bölgeye yerleştirebilirsiniz. Uygulanacak bölge temiz olmalı. Uygulamadan önce bölgeye parlak vernik atarsanız çıkartmanın çok daha iyi tutmasını sağlarsınız. Daha sonra tekrar üzerine tercihinize göre mat, parlak ya da saten vernik atabilirsiniz.
- ❖ Bitmiş modelinizi zamanla deforme olmaması için güneş ışığı, sıcaklık ve rutubet gibi etkenlerden uzak bir yerde sergileyiniz.

Destek için e-mail: info@turkmodel.net
www.turkmodelshop.com
www.facebook.com/turkmodel
www.instagram.com/turk_model1