


# BLADE® 350 QX

## Blade® 350 QX 2.0 Copper Foil Shielding Instructions

The Blade® 350 QX Firmware 2.0 includes two adhesive-backed, metal-foil sheets to provide GoPro® users with an extra measure of RF-shielding.

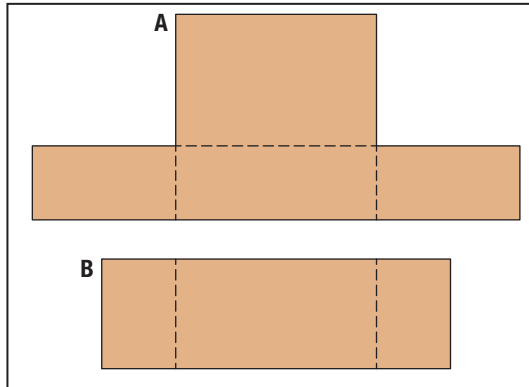

1. Fold the inner "T" sheet (**A**) around the camera with the metallic side facing away from the camera so it covers the top, sides and back.

**DO NOT peel off the backing.**

2. Peel the backing off the rectangular sheet (**B**).

3. Wrap sheet **B** around the back of sheet **A**, sealing all the rear edges and holding everything together.

4. The shield is removable and is held in place by the 350 QX camera mount.

The front and bottom of the camera are left unshielded to allow any RF noise to radiate out and away from the 350 QX.

