


LED STATUS INDICATIONS DURING STARTUP

Main LED Status Indicator

- Initialization in progress
- Initialization failed
- The aircraft is in 'bind' mode
- The aircraft is not connected/linked to the transmitter
- The aircraft is in a no-fly zone*

*Please see the instruction manual for more information regarding no-fly zones

Flashes red, green and blue (2 times per second)
 Pulses red (3 times per second)
 Flashes orange very rapidly (10 times per second)
 Flashes blue rapidly (5 times per second)
 Flashes red and white rapidly (5 times per second)

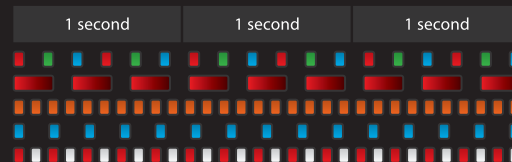


LED STATUS INDICATIONS BEFORE/DURING FLIGHT

Main LED Status Indicator

- The aircraft is in Smart Mode with GPS lock
- The aircraft is in Smart Mode without GPS lock
- The aircraft is in Angle Mode with GPS lock
- The aircraft is in Angle Mode without GPS lock
- The aircraft is in Home Mode
- First level low voltage battery warning
- Second level low voltage battery warning
- GPS lost
- Compass calibration required
- Active Smart Mode, Follow Mode and Active Home Mode Activated

Glow solid green
 Flashes green (3 times per second) then off (for 1 second)
 Glow solid purple
 Flashes purple (3 times per second) then off (for 1 second)
 Flashes red rapidly (5 times per second)
 Flashes red, green and blue every 3 seconds
 Flashes red, green and blue continuously
 Flashes purple (1 flash per second)
 Flashes orange twice between any LED indication (when in the air)
 Flight Mode Status LED Color + White LED Flashes Every 3 Seconds

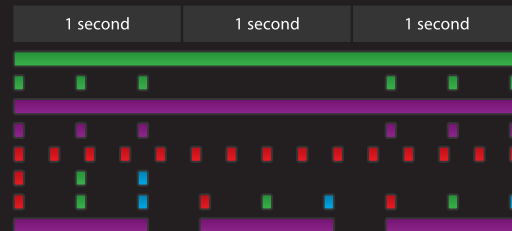

Below Motor Led Status Indicators

- Low voltage battery warning

Flash rapidly (5 times per second)

LED STATUS INDICATIONS FOR CALIBRATION MODES

Main LED Status Indicator

- Compass calibration Mode entered
- Compass calibration started
- Accelerometer calibration started
- Accelerometer calibration Mode entered/data collection finished
- Calibration failed

Flashes red and green slowly (2 times per second)
 Flashes red and green rapidly (5 times per second)
 Flashes red, green and blue rapidly (3 times per second)
 Flashes red, green and blue slowly (1 time per second)
 Glow solid white



CGO2-GB CAMERA LED STATUS INDICATIONS

- WiFi / camera initialization in progress
- MicroSD card error or missing microSD card
- Ready
- Taking still photo
- Recording video

Glow solid red
 Flashes yellow (1 time per second)
 Glow solid green
 Glow solid blue (1 time for 2 seconds)
 Flashes green, blue slowly (1 time per 2 seconds)

